


PROFUSION[®]

H · E · A · T

UTILITY CERAMIC HEATER

Instruction Manual

Model: DQ1016A

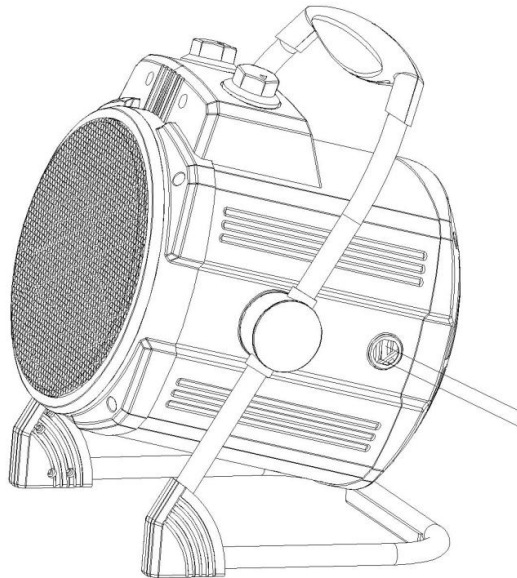

READ AND SAVE THESE INSTRUCTIONS


READ CAREFULLY BEFORE ATTEMPTING TO ASSEMBLE, INSTALL, OPERATE OR MAINTAIN THE PRODUCT DESCRIBED.

PROTECT YOURSELF AND OTHERS BY OBSERVING ALL SAFETY INFORMATION
FAILURE TO COMPLY WITH INSTRUCTION COULD RESULT IN PERSONAL INJURY
AND/OR PROPERTY DAMAGE.

IMPORTANT INSTRUCTIONS

When using this appliance, basic precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

CAUTION- High temperature, keep electrical cords, drapery, and other furnishings at least 3 feet (0.9m) from the front of the heater and away from the side and rear.

The meaning of figure  in marking is "DO NOT COVER".

WARNING: In order to avoid overheating, do not cover the heater.

1. Read all instruction before using the heater.
2. Remove the unit from its packaging and check to make sure it is in good condition before using.
3. Do not let children play with parts of the packing (such as plastic bags).
4. Check the household voltage to ensure it matches the heater's rated specification.
5. Check the power cord and plug carefully before use to make sure that they are not damaged.
6. Before unplugging the power cord, be sure to turn off the power. When touching the unit, be sure your hands are dry to prevent from electric shock.
7. Do not use near to, or point the heater at, furniture, curtains, or other inflammable objects. Keep combustible materials, such as furniture pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9m) from the front of the heater and keep them away from the sides and rear.
8. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
9. Extreme caution is necessary when any heater is used by, or near children or invalids, and whenever the heater is left operating and unattended.
10. Always unplug the heater when not in use.
11. Prevent water from getting into the housing of the heater during operation or in storage. Always store in a dry area free from potential moisture.
12. Do not use in places where gasoline, paint, or other inflammable liquids are used or stored.
13. Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool. Never locate the heater where it may fall into a both tub or other body of water.
14. Do not run the cord under carpeting. Do not cover the cord with throw rugs, runners, or the like. Arrange the cord away from traffic areas and where it will not be tripped over.
15. Do not use on soft surfaces, like a bed, where openings may became blocked.
16. Do not operate any heater with a damaged cord, damaged plug, after the heater malfunctions, or if it has been dropped or damaged in any manner. Return the heater to an authorized service facility for examination, electrical or mechanical adjustment, or repair.


17. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may causes an electric shock or exhaust opening as this may causes an electric shock or fire, or damage the heater.
18. This heater is hot when in use. To avoid burns, do not let bare skin touch the hot surfaces. If provided, use handles when moving this heater.
19. Use this heater only as described in this manual. Any other uses not recommended by the manufacture may cause fire, electric shock, or personal injury and may void the warranty.
20. Always plug heater directly into a wall outlet/receptacle .Never use with an extension cord or relocatable power tap (outlet/power strip).
21. Do not use outdoors.
22. To disconnect heater, turn controls to off, then remove plug from outlet.
23. **WARNING: RISK OF FIRE** Keep combustible material such as furniture, paper, clothes, and curtains at least 3 feet (0.9m) from the front of the heater and keep them away from the side and rear when the heater is plugged in.
24. Do not place any objects such as furniture, papers, clothes, and curtains closer than 3 feet to the front of the heater and keep them away from the sides and rear when the heater is plugged in.
25. Do not place the heater near a bed because objects such as pillows or blankets can fall off the bed and be ignited by the heater.
26. Never clean this heater while it is plugged in. Do not immerse in water. To disconnect, turn control to OFF, then remove the plug from the outlet by grasping it and pulling it from the outlet. Never yank on the cord.
27. Children of less than 3 years should be kept away unless continuously supervised .Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

CAUTION--Some parts of this product can become very hot and cause burns.Particular attention has to be given where children and vulnerable people are present.

28. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
29. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent.
30. Connect to a properly grounded, 3-prong outlet only. Do not connect the heater to extension cords, surge protectors, timers, direct breakers, or an outlet with other appliances connected to the same outlet. **Risk of fire, overheat, malfunction, property damage, injury, or even death may result if not adhered to!**

31. A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
32. The heater must not be located immediately below an electrical socket-outlet.

SAVE THESE INSTRUCTIONS

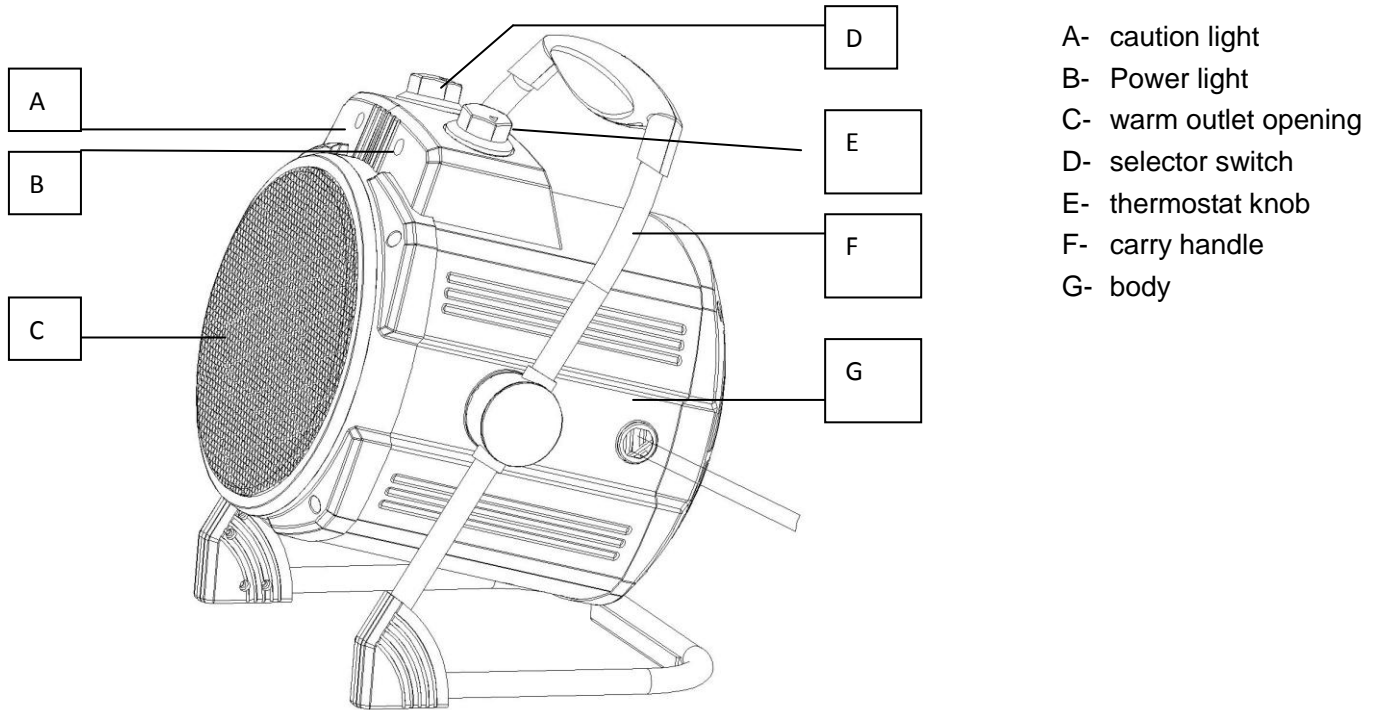

How to use

Turn off all the controls of the heater, and then plug the heater power plug directly into a standard AC outlet. Be sure plug fits tightly into outlet.

Rotate the thermostat control knob clockwise to high position.

Set the selector switch to desired position. Use High setting to raise the temperature quickly. For reduced output, flip the selector switch to LOW.

Slowly turn the thermostat knob counter clockwise until the heater shut off. The heater will automatically maintain this temperature, for a lower temperature. Rotate the knob further counter clockwise. For a higher temperature, rotate the knob clockwise.

Power light remains on when the heater power supply cord is plugged into an electrical outlet and operated well. (Note: The heater would cycle "on" automatically if the room temperature drops below the thermostat control setting.)

This unit has FAN only setting which helps you to cool down the unit before you turn it off.


Warning:

Always unplug the heater when not in use

To disconnect heater, turn the thermostat control to off, then remove plug from outlet.

This heater is equipped with an automatic overheat safety device. If temperature of the heater becomes too high, the automatic device will turn OFF the motor and heating elements and turn on the red light marked "CAUTION".

If this occurs, make sure heater is on a level surface and clear of obstacles. Unplug heater and allow it to cool down before restarting.

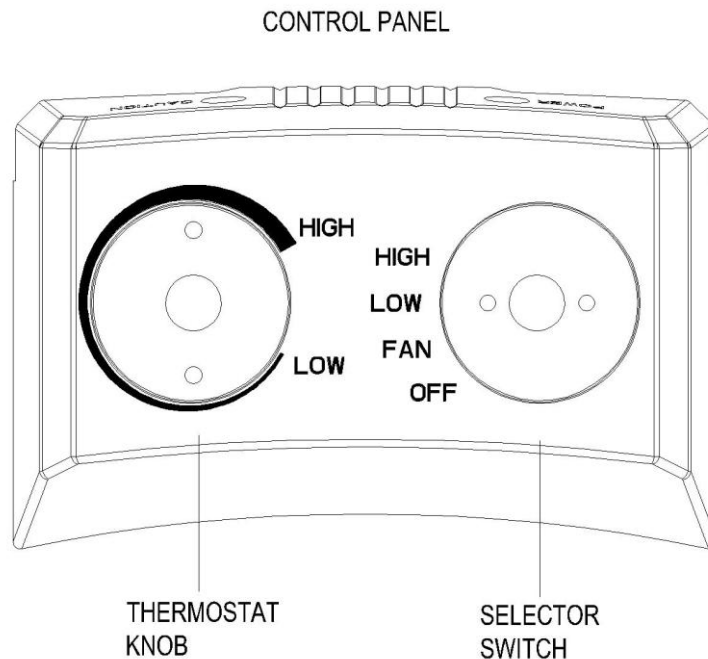

MAINTENANCE

WARNING: ALWAYS UNPLUG THE CORD BEFORE MOVING OR SERVICING. DO NOT IMMERSE HEATER IN WATER!

WARNING: In case of malfunction or doubt, do not try to repair the heater yourself. It may result in a fire hazard or electric shock.

CLEANING: IMPORTANT! DO NOT IMMERSE HEATER IN WATER! Clear the heater grills with the vacuum brush attachment on your vacuum cleaner. This will remove lint and dirt from the inside of the heater. DO NOT ATTEMPT TO TAKE HEATER APART. Clean the body of heater with a soft cloth.

CAUTION: Do not use gasoline, benzene, thinner, harsh cleaners, etc. as they will damage the heater. NEVER USE ALCOHOL OR SOLVENTS.

STORAGE

Return carton for storage of heater, wrap and tie cord to avoid damage when store.

Environmental Protection



- Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. When scrapping the heater, follow the regulations concerning the disposal of oil.