



TOWER FAN OPERATION MANUAL

MODEL	RATED	HEIGHT
FTN42-E	120VAC 60Hz 45W	42"



**READ AND SAVE THESE SAFETY INSTRUCTIONS
BEFORE USING THIS FAN**

**NOTE: FOR HOUSEHOLD USE ONLY.
NOT INTENDED FOR COMMERCIAL USE.**

IMPORTANT SAFETY INSTRUCTIONS

READ AND SAVE THESE SAFETY INSTRUCTIONS BEFORE USING THIS FAN

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Use this fan only as described in this manual. Other use not recommended as it may cause fire, electric shock or injury to persons.
2. This product is intended for household use ONLY and not for commercial, industrial or outdoor use.
3. To protect against electric shock, do not place fan in window and immerse unit, do not put the plug and cord in water or spray with liquids.
4. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. DO NOT attempt to bypass this safety feature.
5. Close supervision is necessary when any appliance is used by or near children.
6. Turn the fan OFF and unplug the fan from the outlet when not in use, when moving the fan from one location to another and before cleaning.
7. To disconnect the fan, first turn the unit OFF, grip the plug and pull it from the wall outlet. Never pull the plug by the cord.
8. Do not operate the fan in the presence of explosive and/or flammable fumes.
9. Do not place the fan or any parts near an open flame, cooking or other heating appliance.
10. Do not operate the fan with a damaged cord or plug or if the product malfunctions, is dropped or damaged in any manner (see warranty).
11. Avoid contact with moving fan parts.
12. The use of attachments not recommended by the manufacturer may be hazardous.
13. Place the fan on a dry level surface.
14. Do not hang or mount fan on a wall or ceiling.
15. Do not operate if the fan housing is damaged.
16. A loose fit between the AC outlet (receptacle) and plug may cause overheating and a distortion of the plug. Contact a qualified electrician to replace loose or worn outlet.

WARNING:

To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.


TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

SAVE THESE INSTRUCTIONS

ASSEMBLY INSTRUCTIONS


Do not use this fan before you finish assembling the base.

Base Assembly

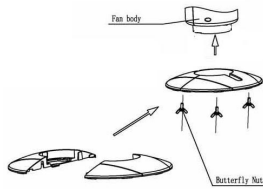

PARTS AND NAME

Control panel (Figure 1)

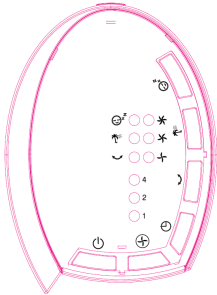














Remote controller (Figure 2)



FAN OPERATION

Plug into any AC 120V, 60Hz source, ensure that the plug and the socket fit well. You can operate the appliance using the control panel on the fan or the remote controller.

Control key		
Control panel key	Remote key	Function
ON/OFF 	ON/OFF 	Press once to turn the fan on. The fan will be on at high “*” speed and normal mode (no indicator light is on under normal fan mode). Press again to turn the fan off.
SPEED 	SPEED 	To adjust the speed up or down, press it once for medium “*” speed, and twice for low “+” speed. Press it a third time to return the fan to high “*” speed operation.
STYLE 	STYLE 	Press it to select normal, natural or sleep fan mode. Press button “↑” button on the top control panel, You can select Normal or Natural fan mode, if you would like

		<p>to select Sleep fan mode, please press “  ” button on the top control panel separately.</p> <p>With the remote control unit and press “  ” button to switch freely between Normal, Natural and Sleep three fan modes.</p> <p>NORMAL: Unit operates in selected fan speed, High, Medium or Low.</p> <p>NATURAL : Unit operates according to computerized intervals of changing speeds.</p> <p>SLEEP : Unit operates according to computerized intervals of changing speeds.</p>
<p>OSC</p> 	<p>OSC</p> 	<p>Press once to change the direction of oscillation from left to right cycled. Press again to cancel.</p>
<p>TIMER</p> 	<p>TIMER</p> 	<p>Press the timer buttons repeatedly to set the timer from 1 to 7 hours in 1-hour increments. When the time runs out, the fan will turn off automatically.</p>

CLEANING AND MAINTENANCE

- Always unplug the fan before cleaning.
- Use only a soft, damp cloth to gently wipe the outer surfaces of the fan clean.
- To clean between the grilles, we recommend using a pipe cleaner, flexible dustwand, vacuum cleaner or compressed air to gently remove the dust.
- DO NOT immerse the fan in water and never allow water to drip into the motor housing.
- DO NOT use gasoline, paint thinner or other chemicals to clean the fan.
- For storage, you may leave the fan assembled and covered to protect it from dust. Store the fan in a cool, dry, place.

NOTE:

This Class B digital apparatus complies with Canadian ICES-003.

WARNING!

DO NOT ATTEMPT TO OPEN OR REPAIR THE FAN YOURSELF. DOING SO COULD VOID THE WARRANTY AND CAUSE DAMAGE OR PERSONAL INJURY